


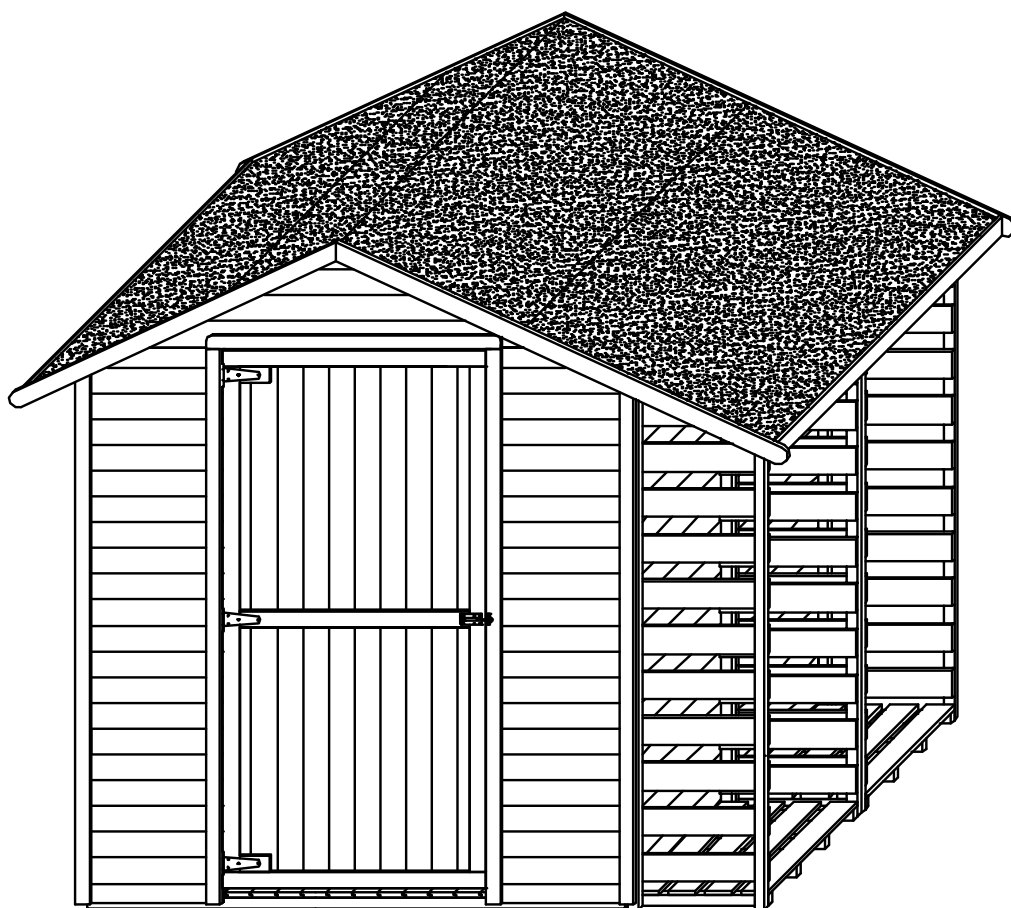


Gartenhaus aus Holz mit Holzschuppen
MASTER 259x213 braun

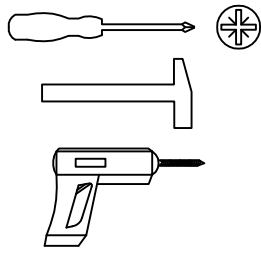


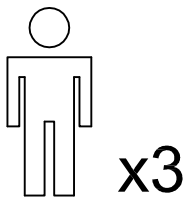


A 4,0x70 - 92




E 3,5x30 - 20




B 5,0x90 - 2




F 80x40 - 1




C 3,5x35 - 53



G 2100x1000 - 3




D Zawias 120 - 3



H 3,0x20 - 40




I 4,0x45 - 9




Vor der Montage verfestigen und nivellieren Sie bitte den Boden.
Vor dem Schraubeneindrehen soll man die Locher bohren.


1

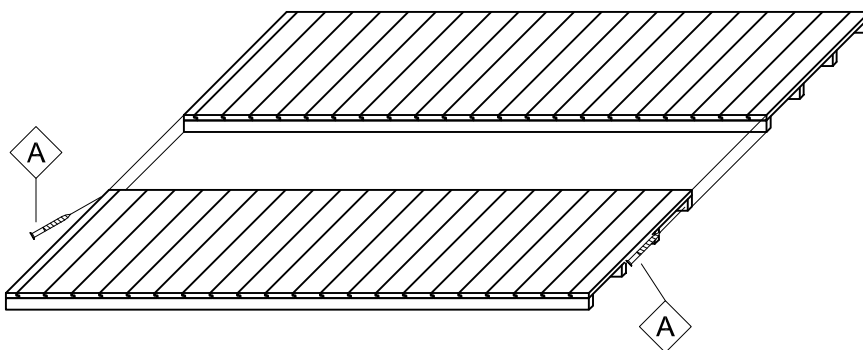


2

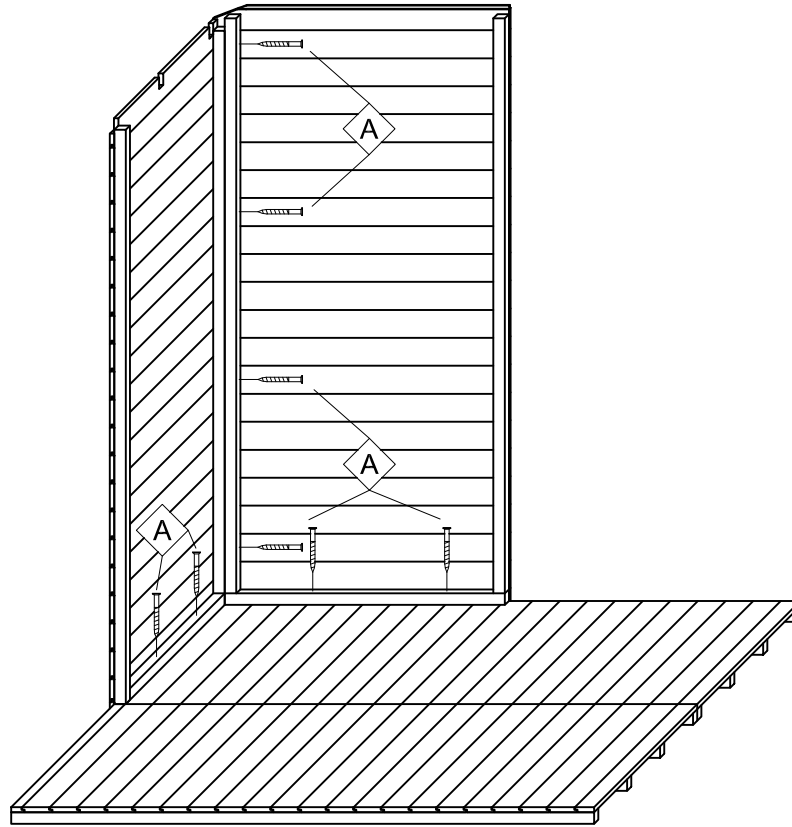


3

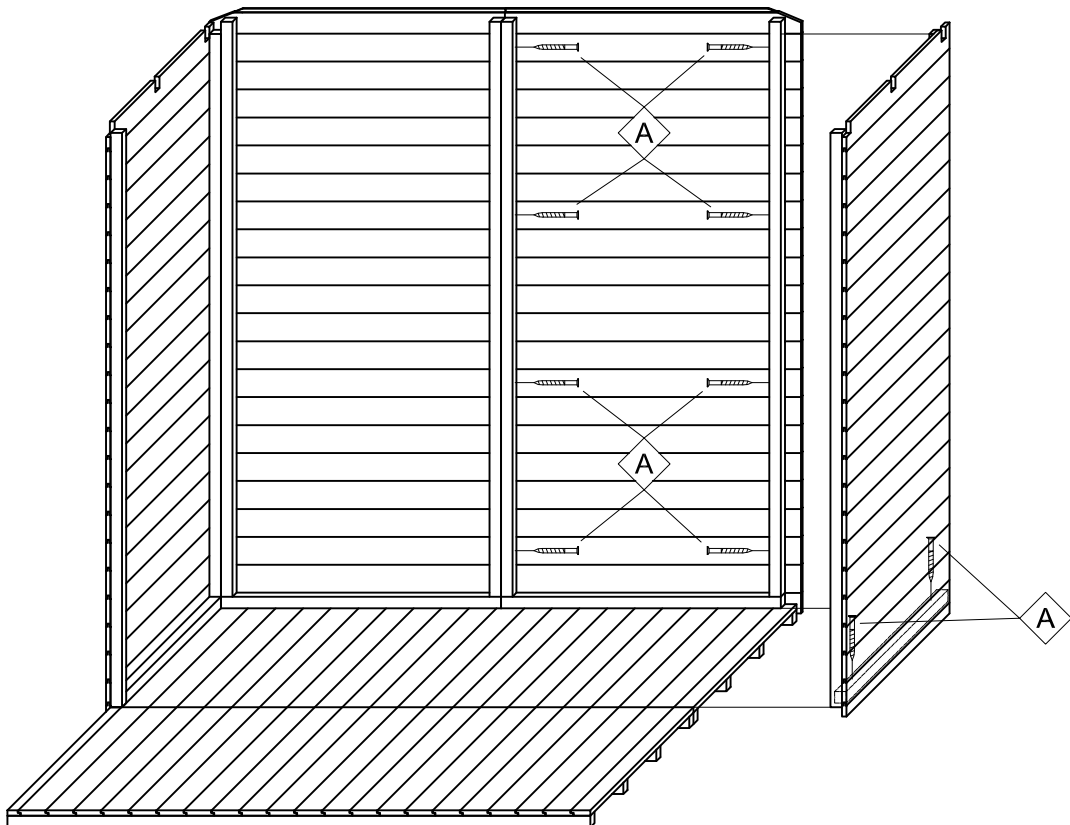


4

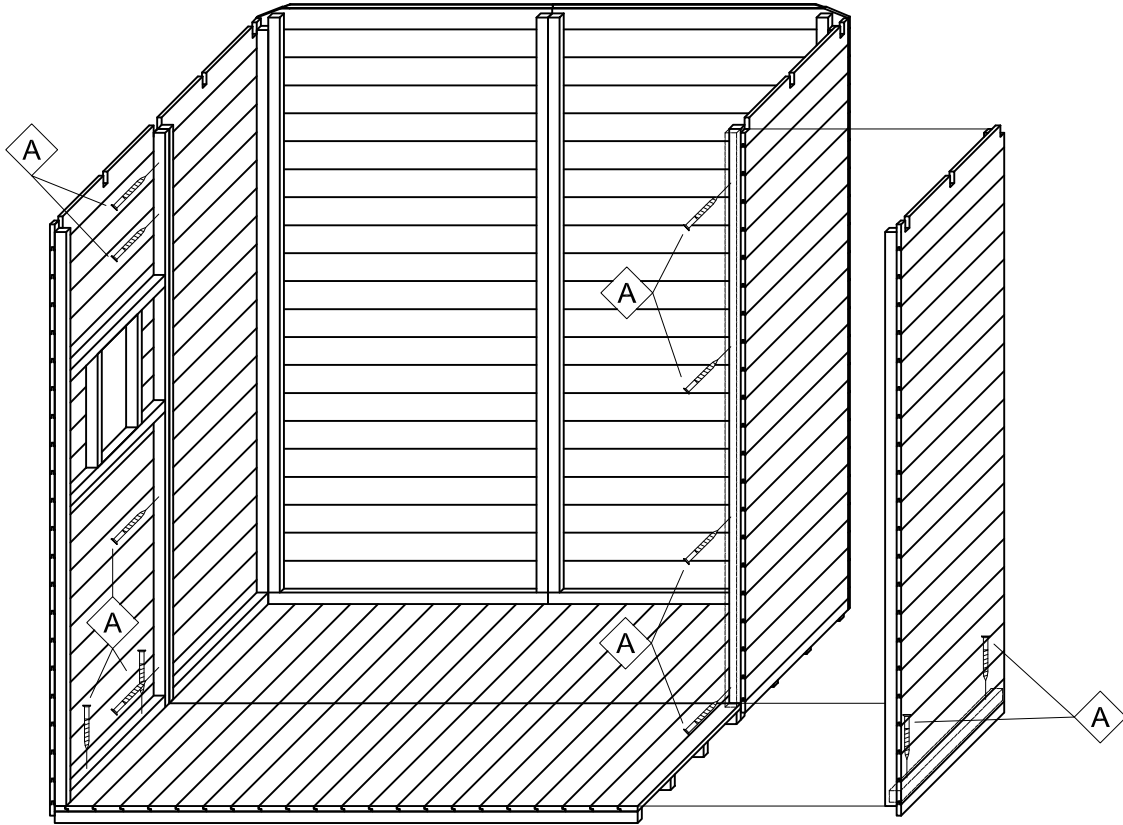


5

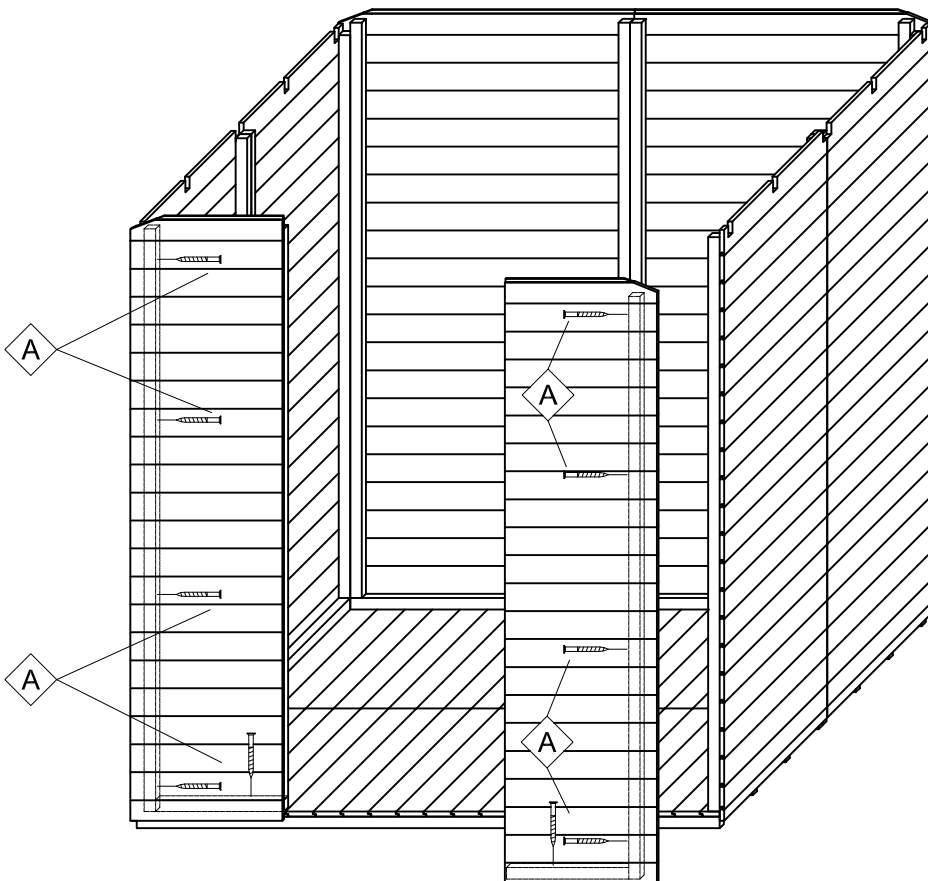


6

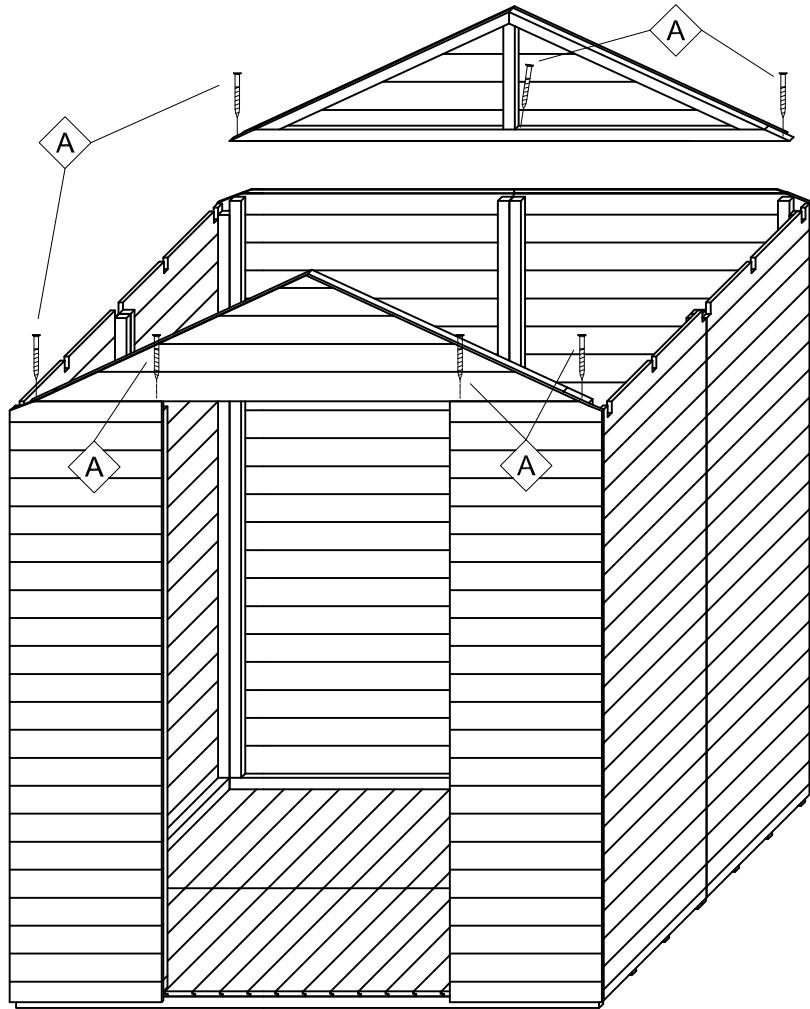


7

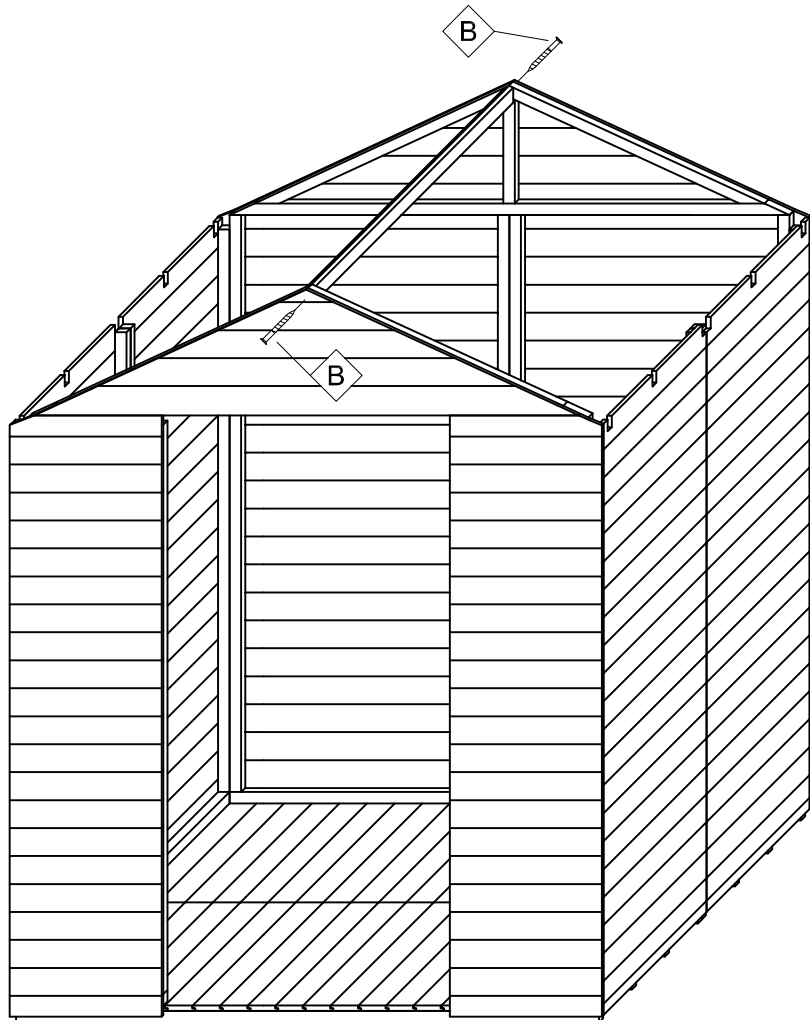


8

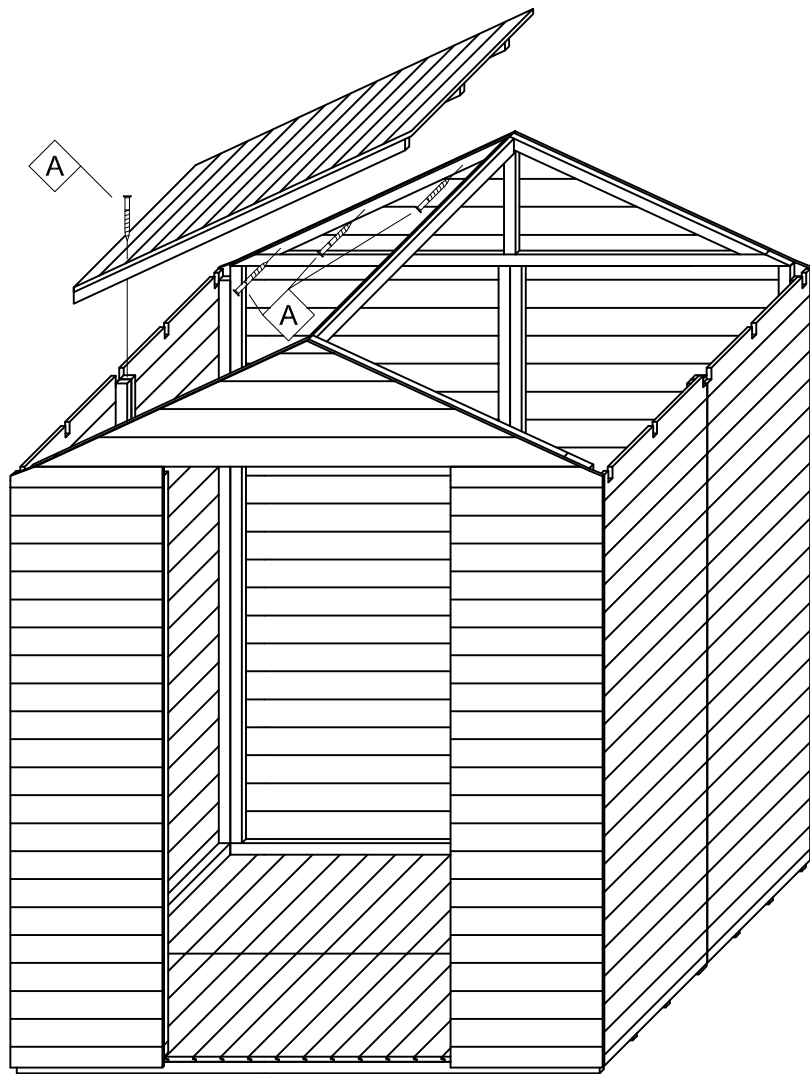


9

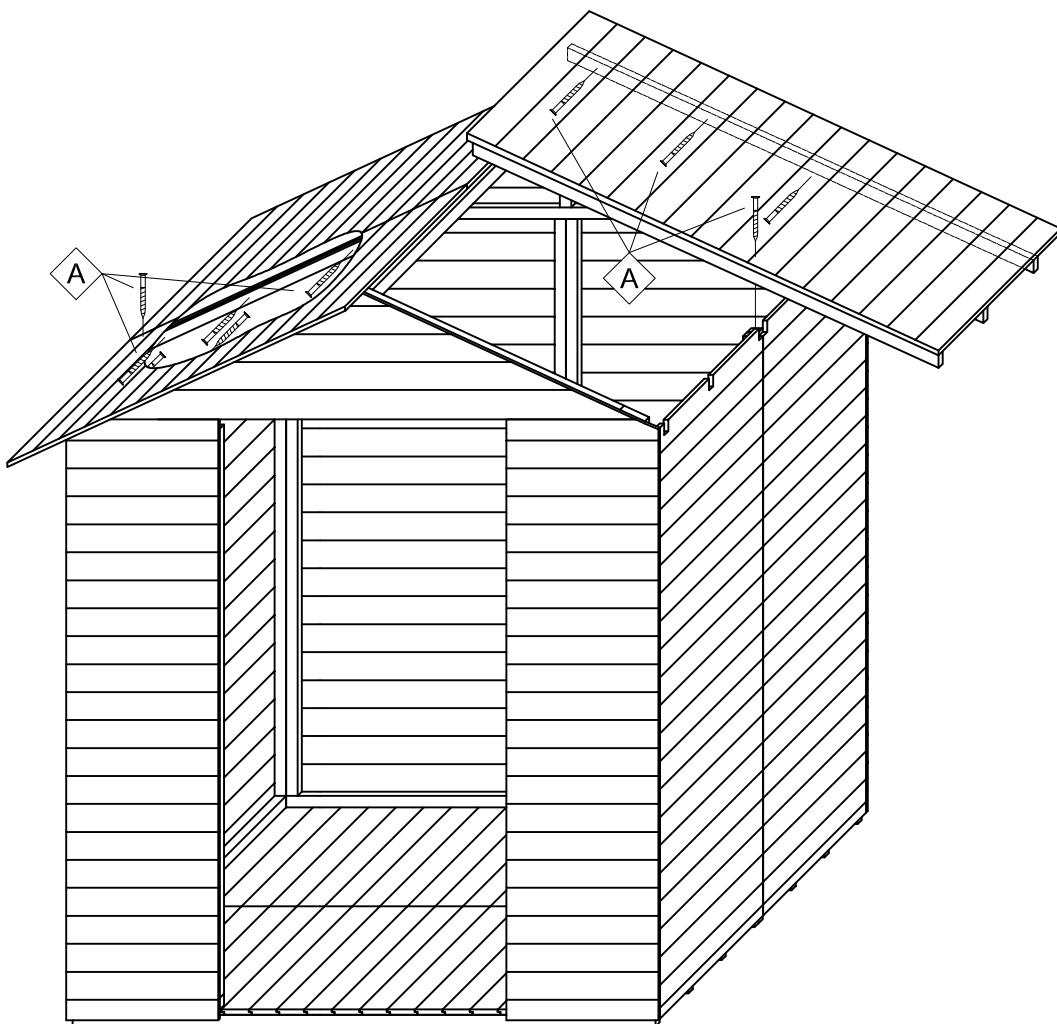


10

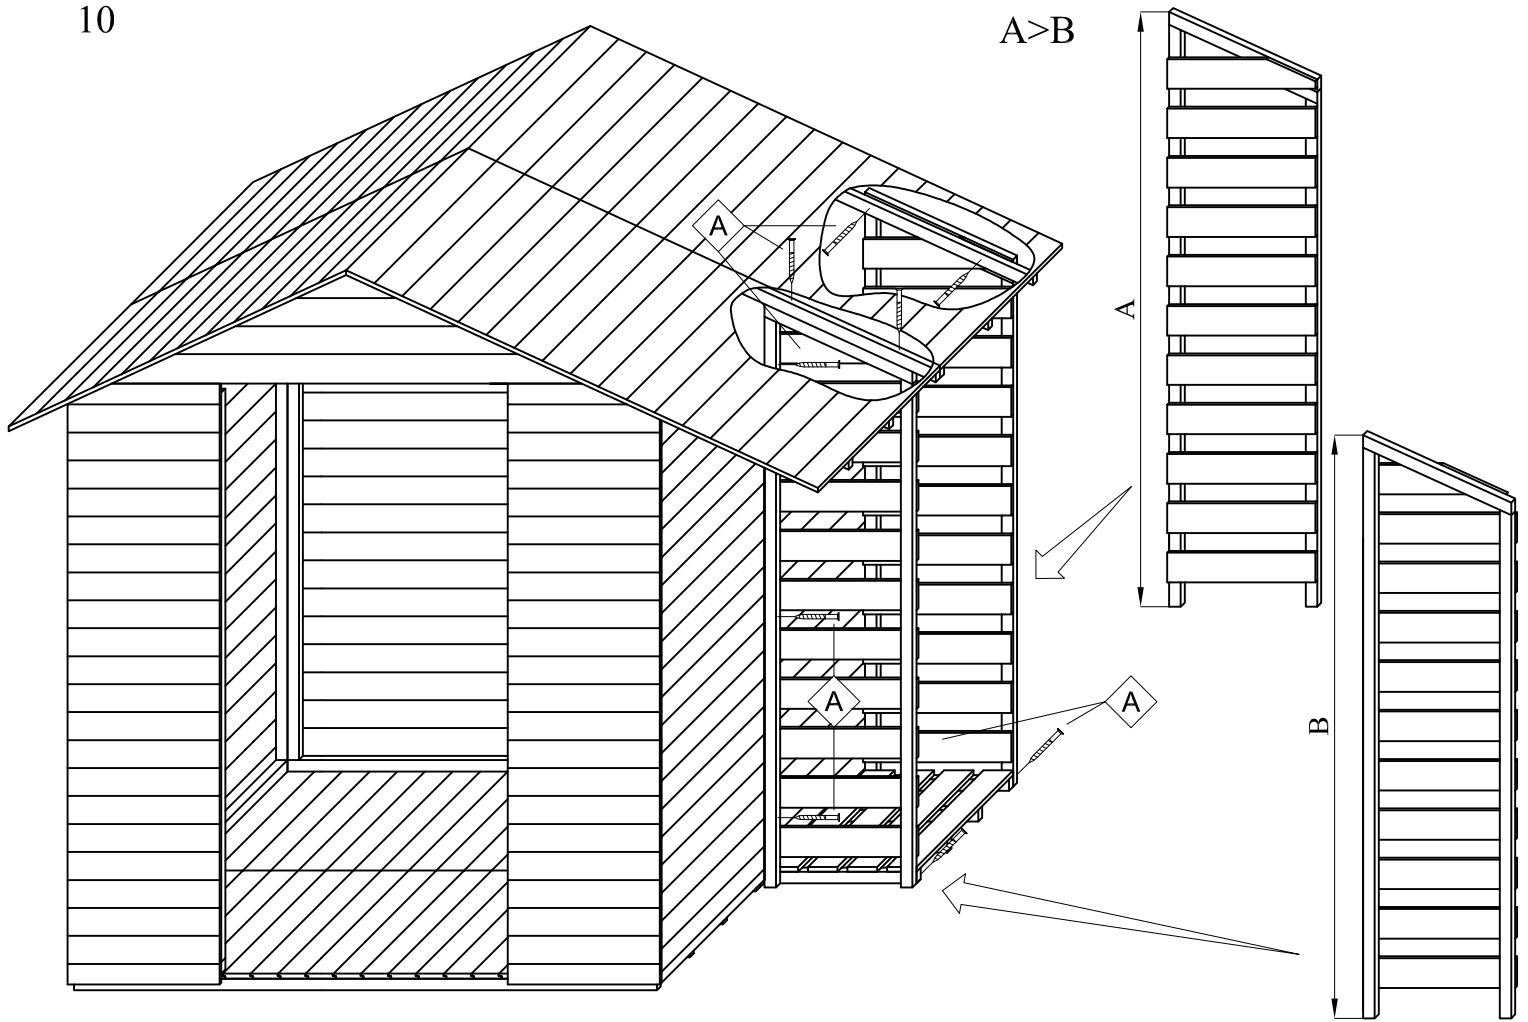


11

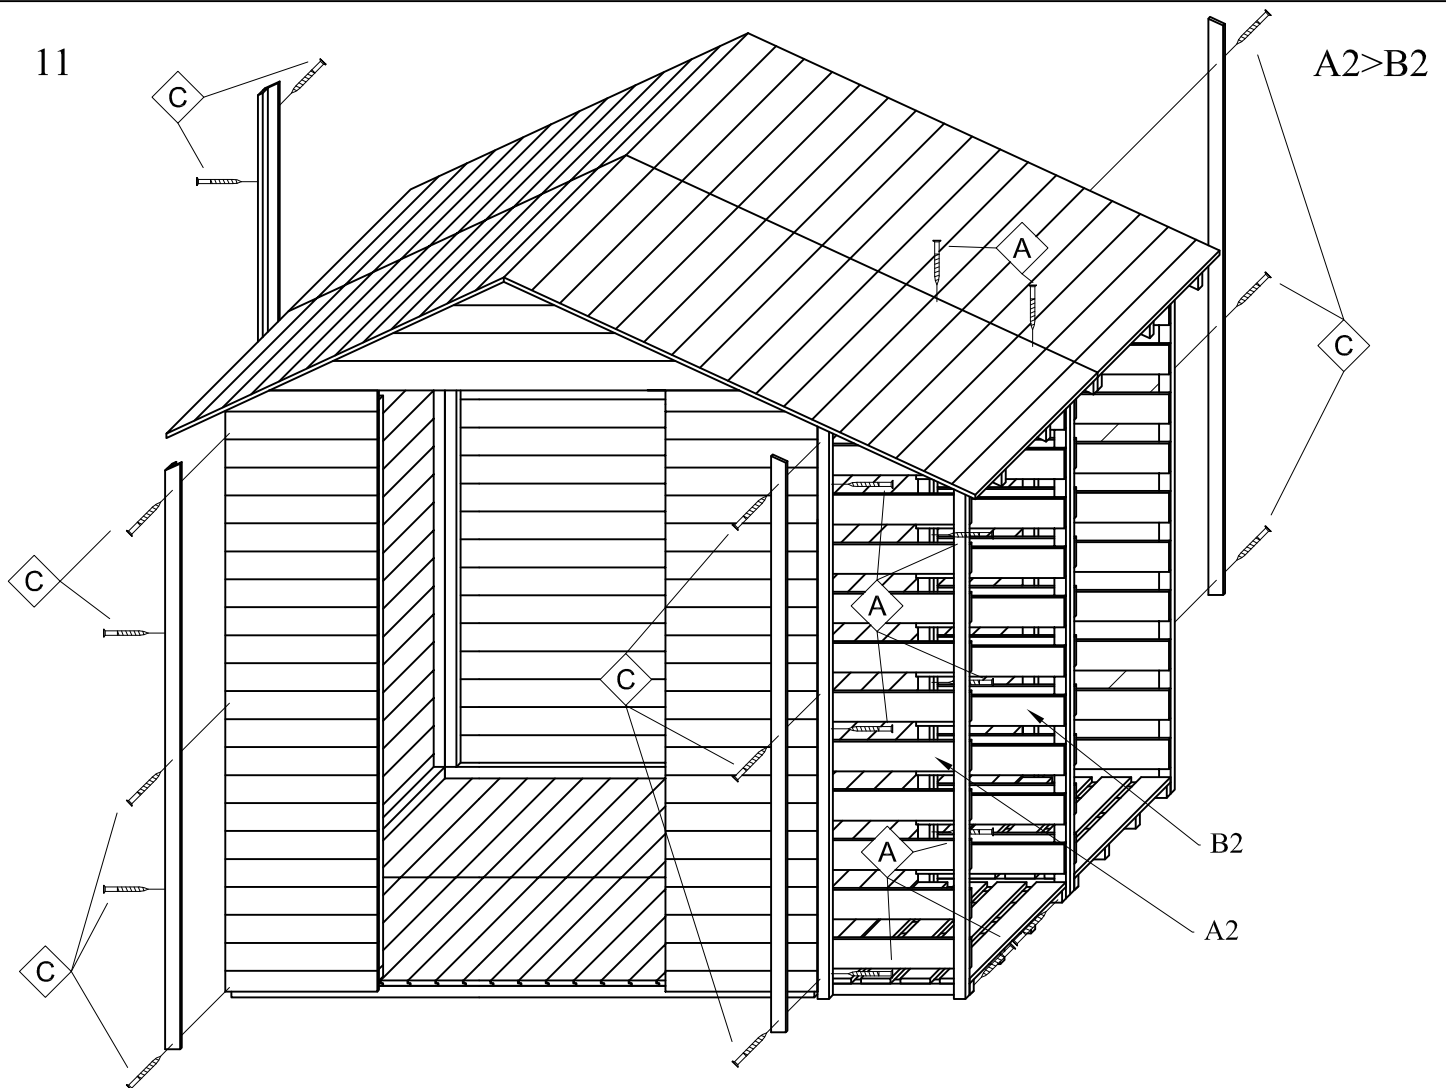


12

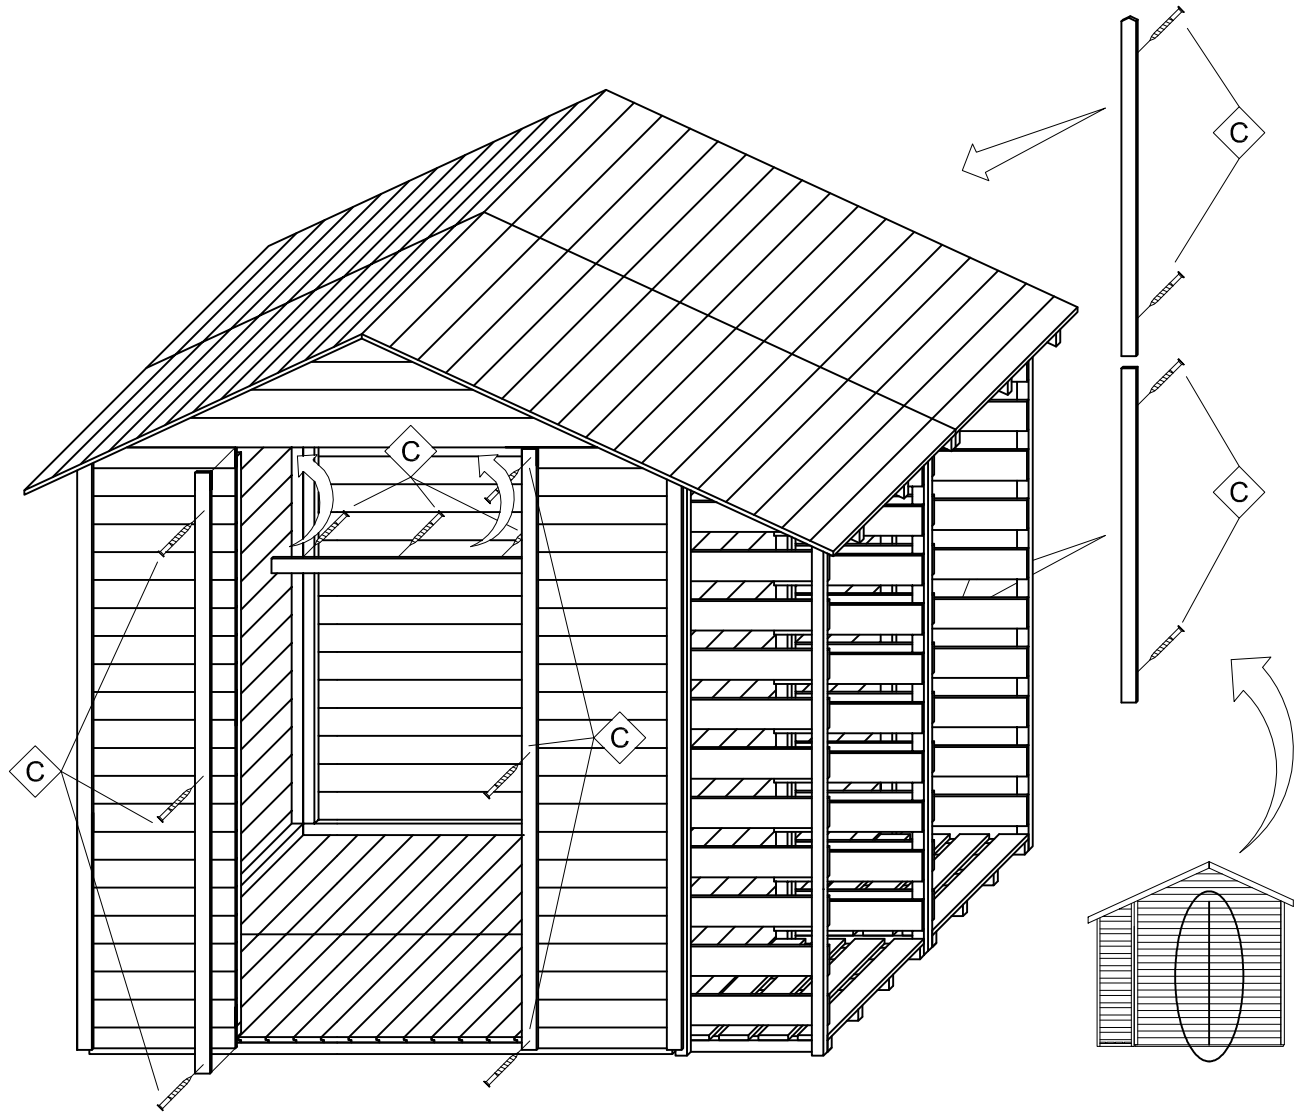

13

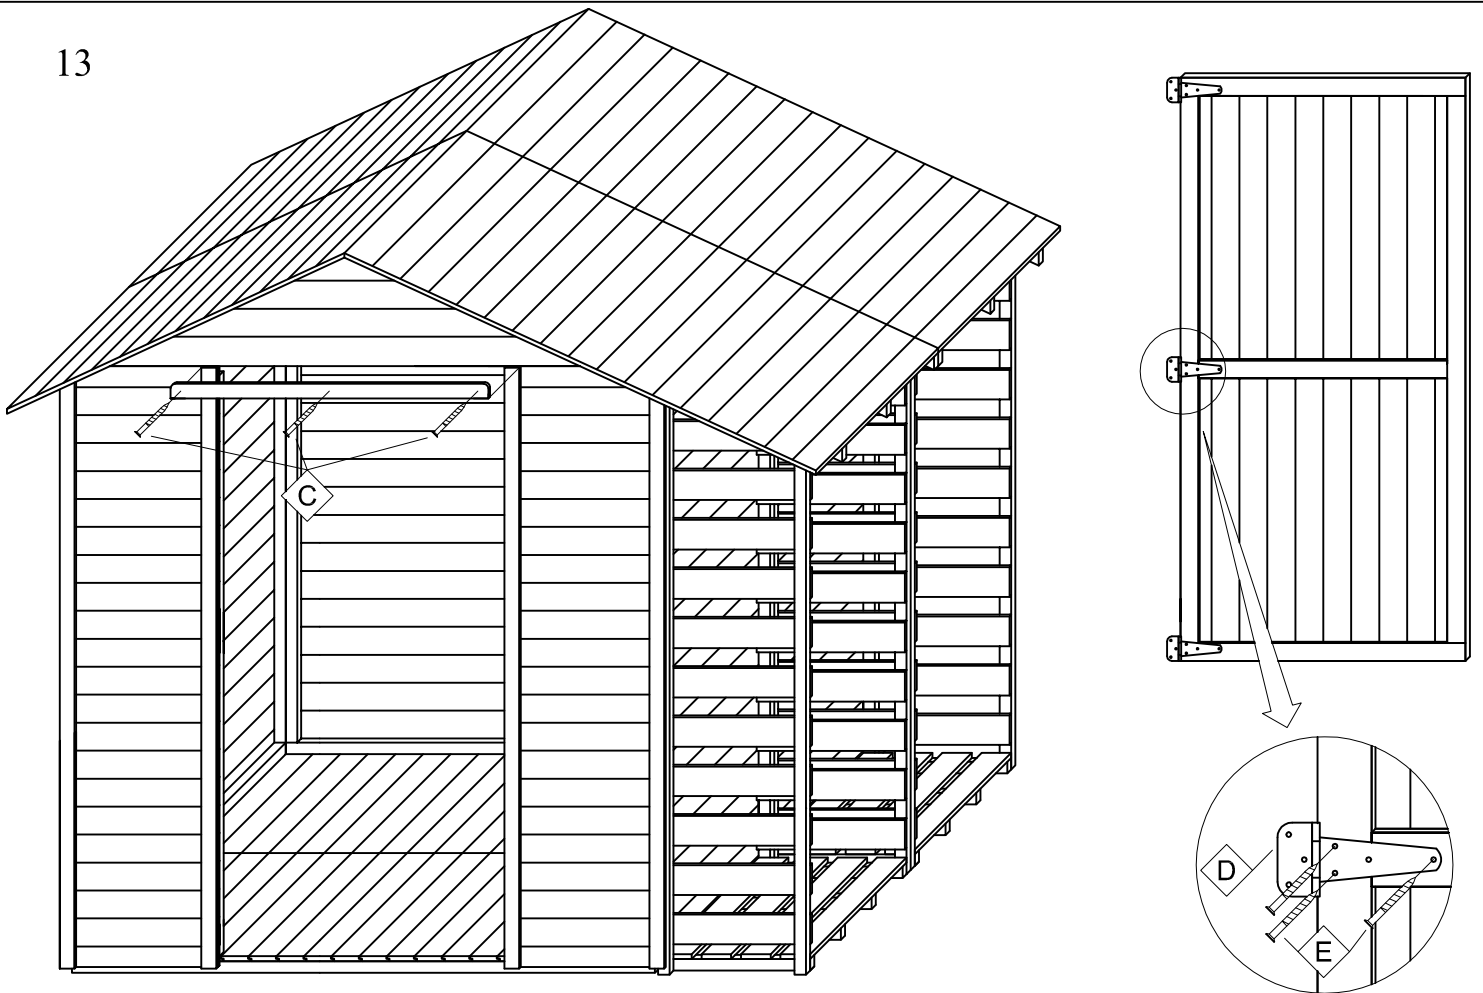

14

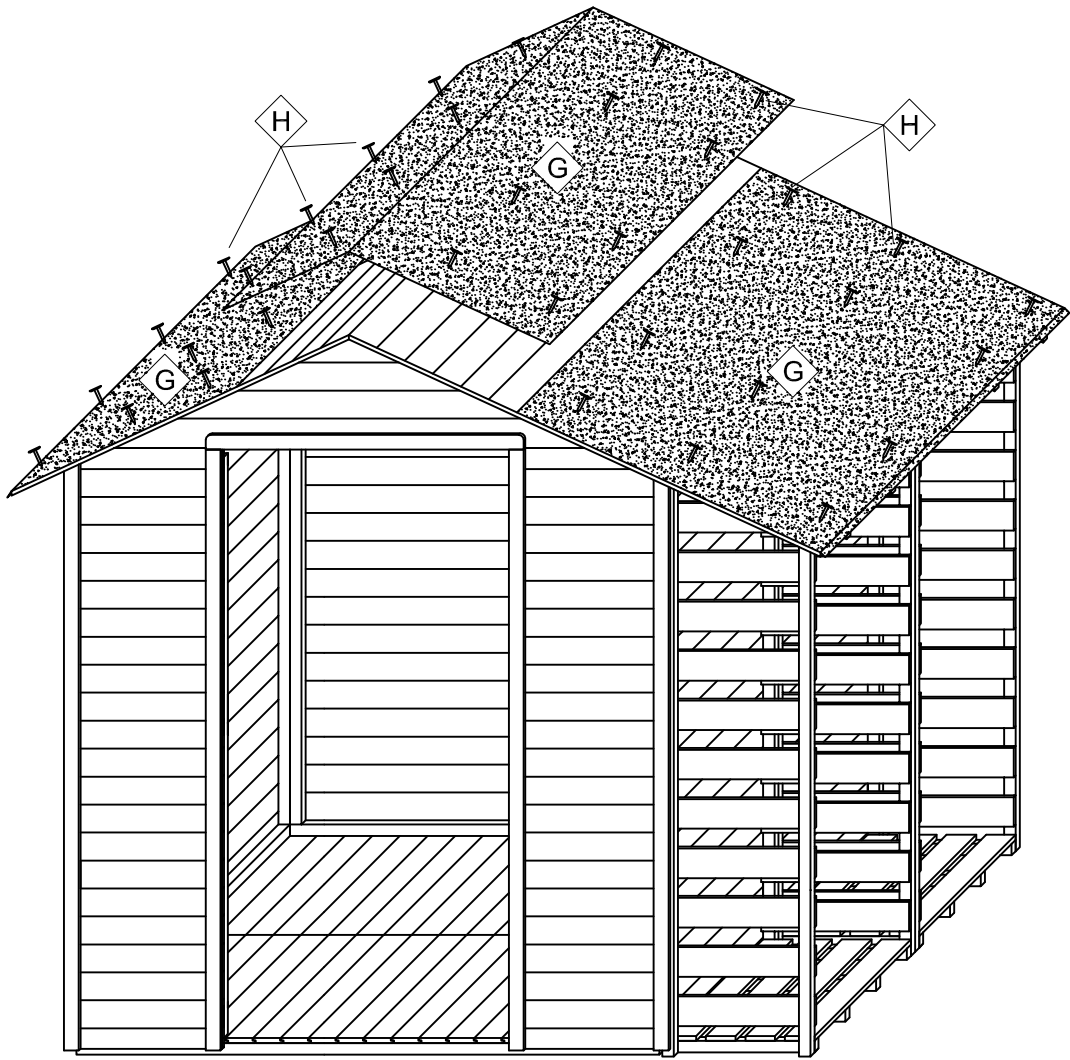

15

